

(

Rehanding

a. If present, remove USB plug

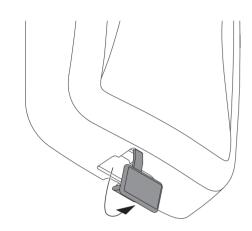



b. Remove reader and cover from baseplate

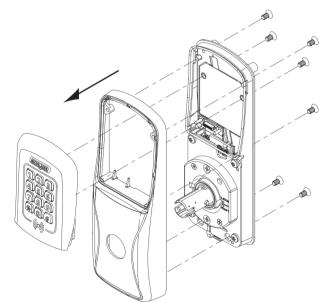


NOTE: On keypad only application, reader is not removable

c. Remove Spring Cage, align arrow with latch, and reinstall

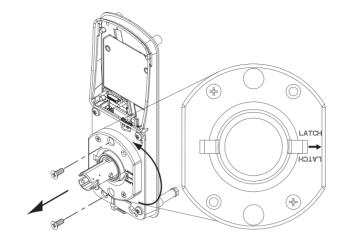

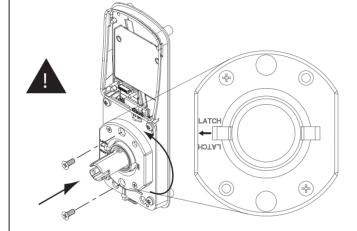

d. Reinstall cover and reader onto baseplate

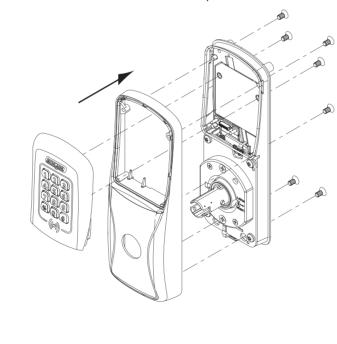


Allegion (Australia) Pty Ltd Phone 1800 098 094

Allegion (New Zealand) Limited Phone 0800 477 869 Website www.allegion.co.nz

01/20





AD-Series with Mortice Lock Installation Instructions AD-200 & AD-400

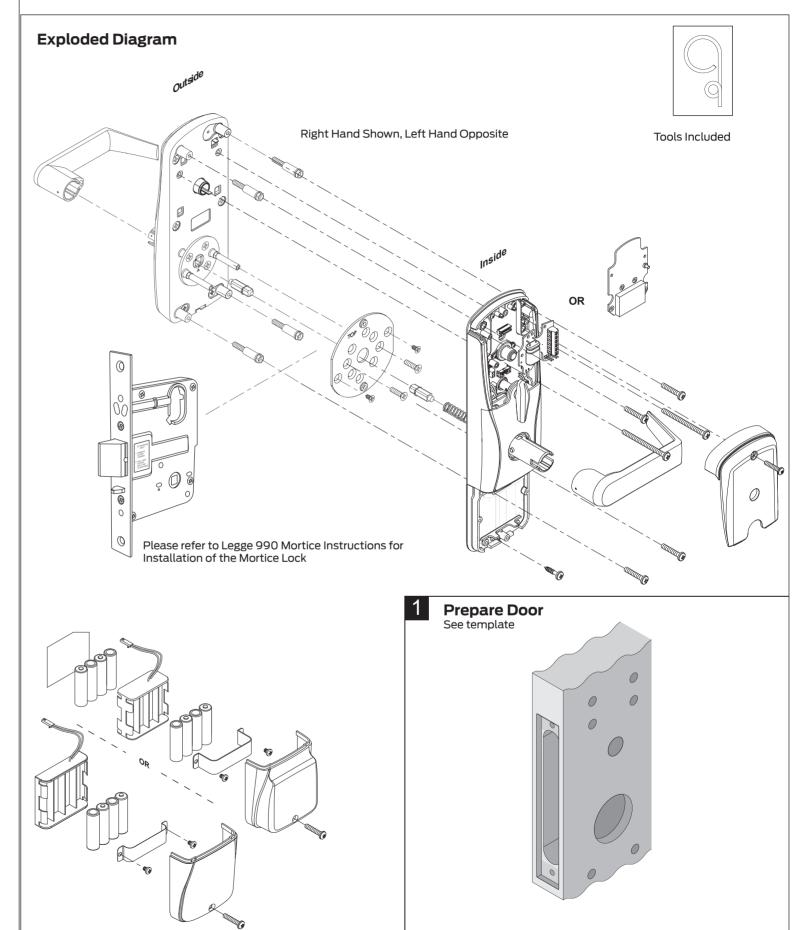





(

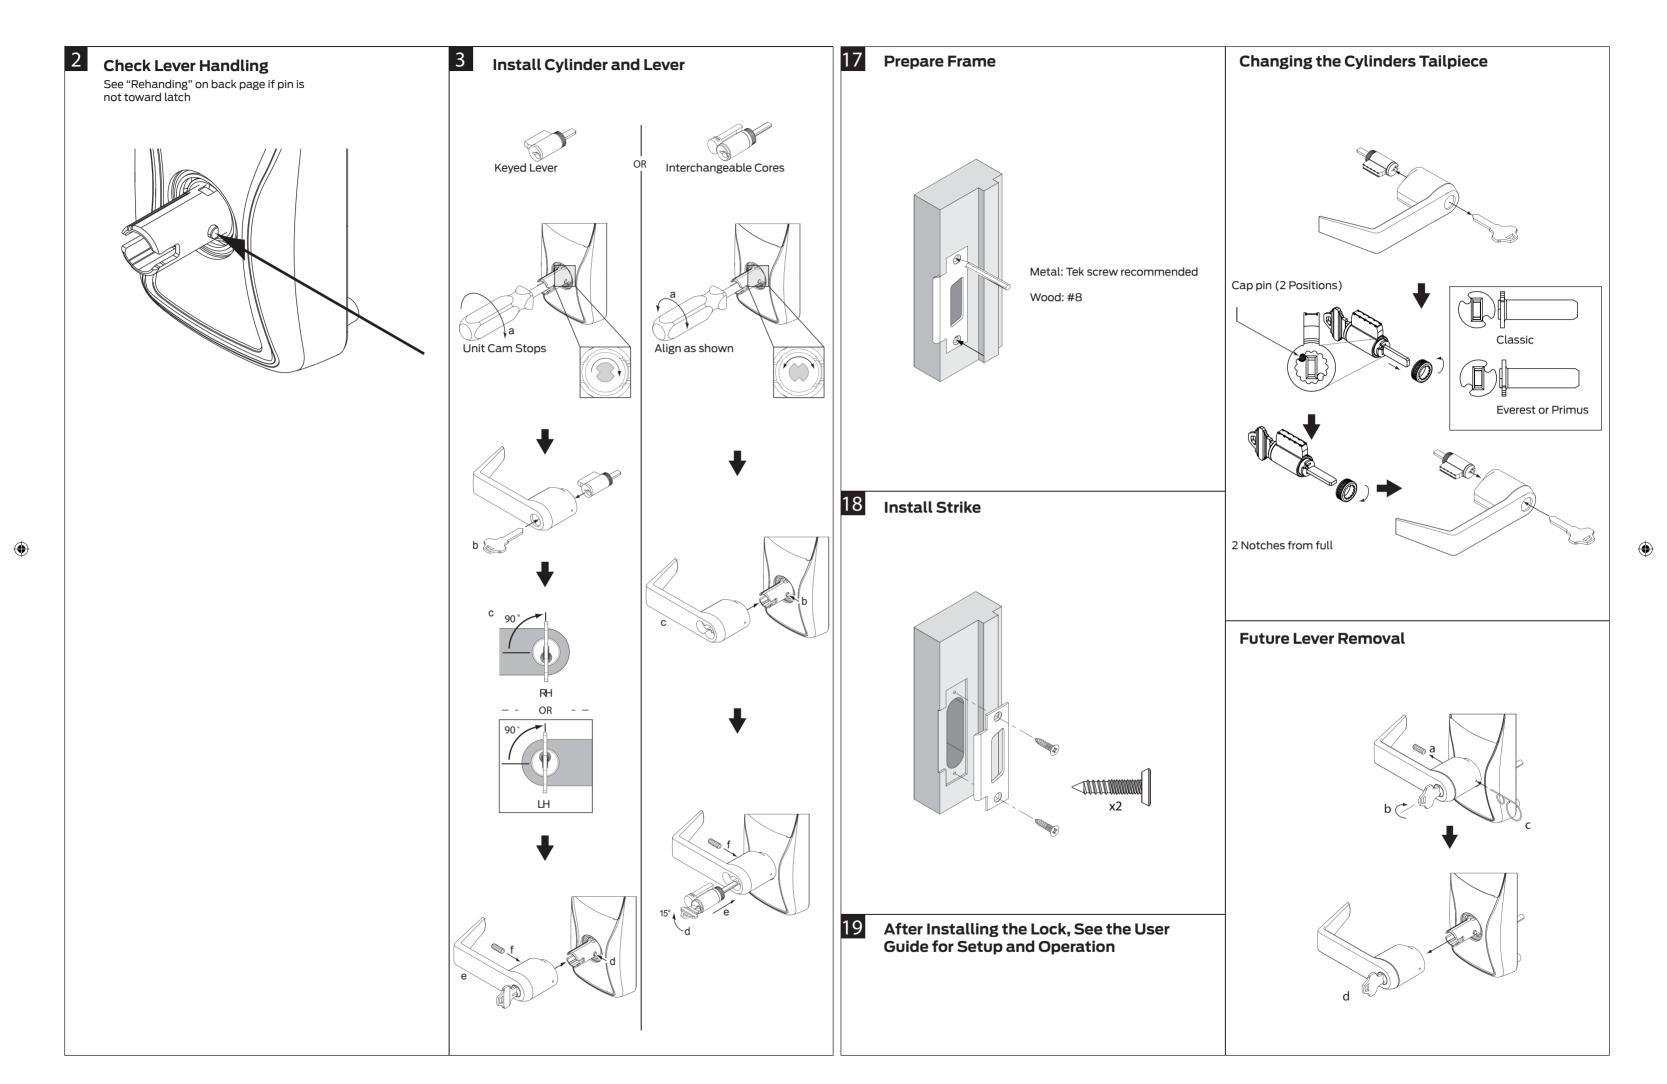


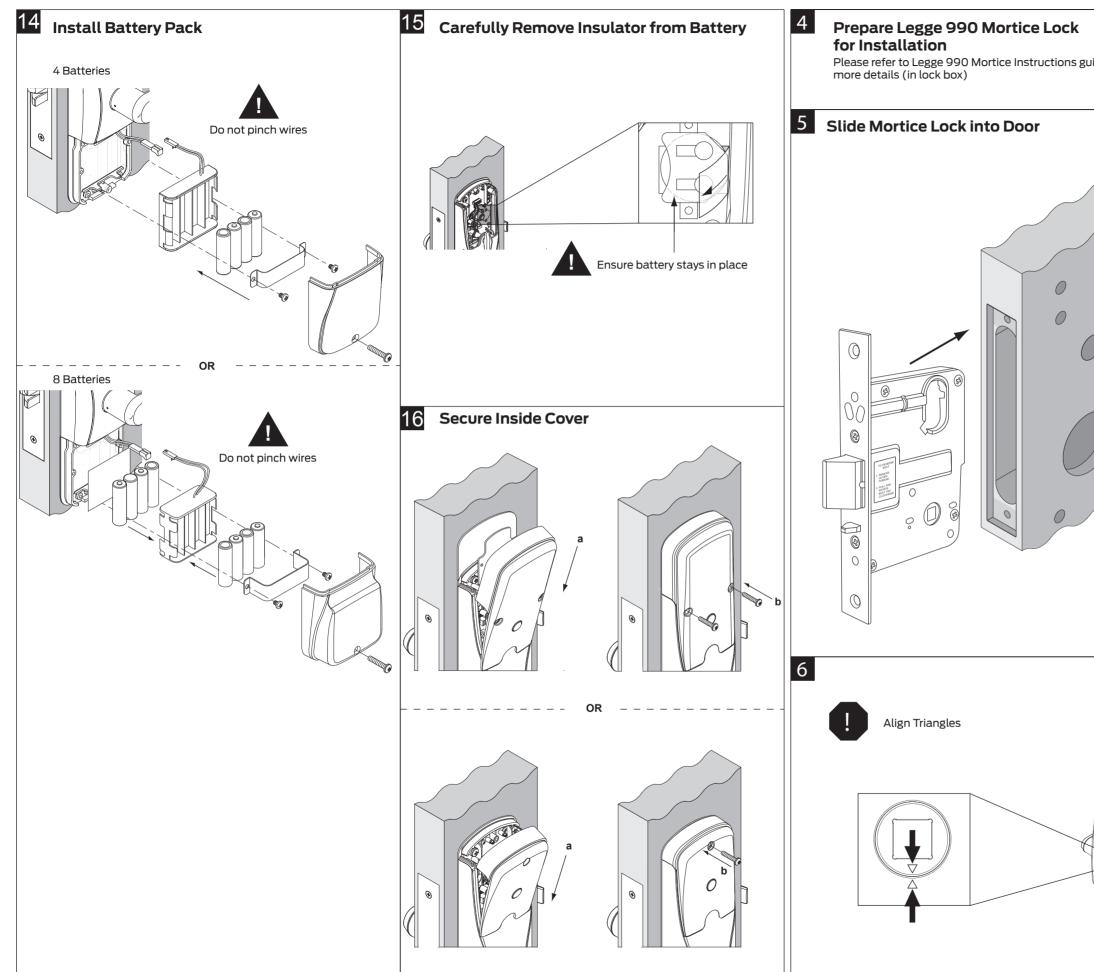


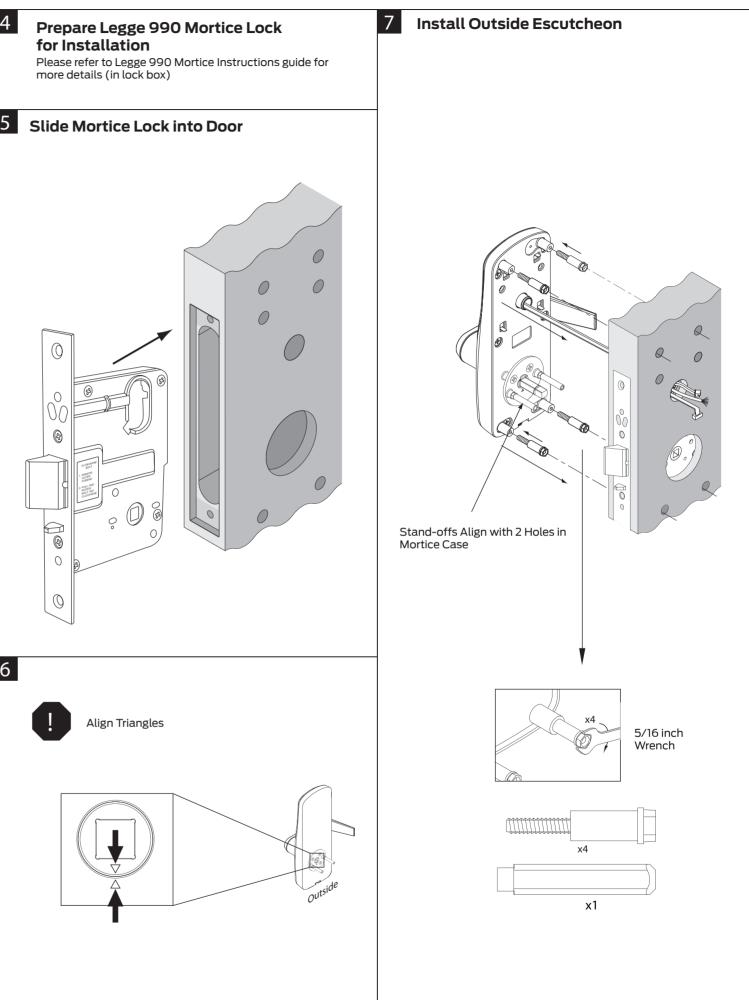



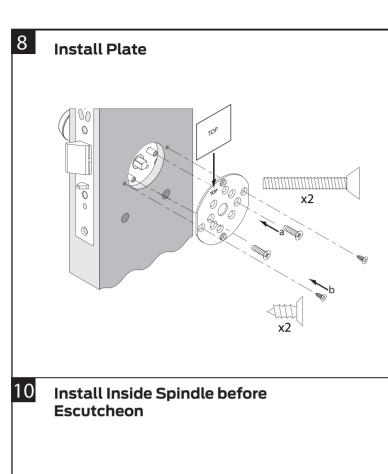

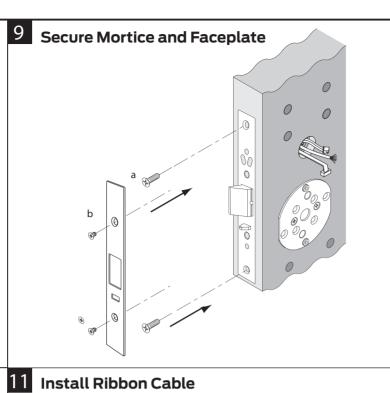

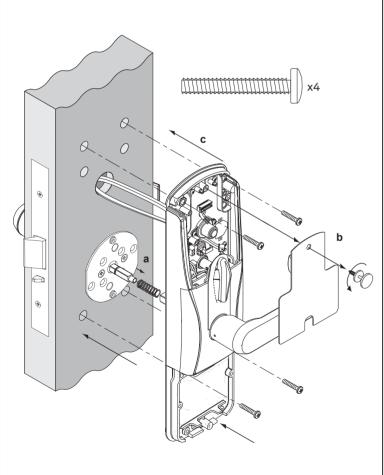

(

