


#51 and #951 Child Finger-Guards INSTALLATION INSTRUCTIONS

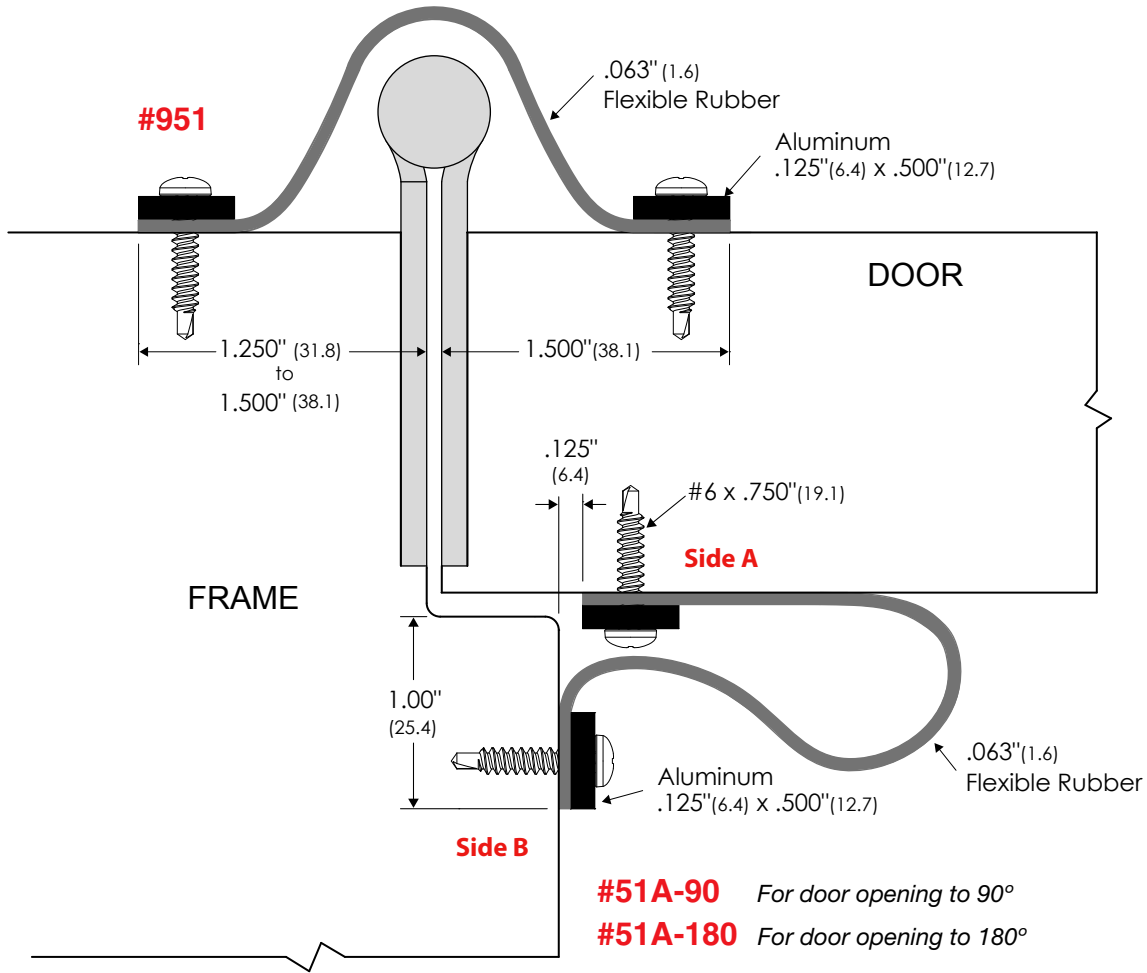

- 1 Before installing make sure finger protection is positioned correctly as illustrated above.
- 2 Install #51A: Attach side A to the door face (.125" from the frame soffit), fasten with screws provided. Attach side B to the frame soffit (1" from the frame stop), fasten with screws provided.
- 3 Install #951: Position one side to the frame face with dimension as shown, fasten with screws provided.

